





Bison Level.It Pedestal Installation Guide

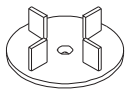

LC Spacer Tab (Specify tab width when ordering)

LT316 - 3/16" (4.5 mm) standard
LT18 - 1/8" (3.2 mm) optional

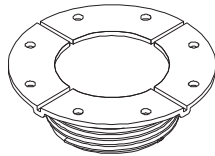


LC Top

Thread engagement indicators warn of overextension. DO NOT extend pedestal top or couplers beyond this point. Works with LC Base or C1, C3, and C4 Couplers.



C3 Coupler (Yellow)


Thread engagement indicators warn of overextension. DO NOT extend pedestal top or couplers beyond this point. Remove coupler to reach lowest elevations. (Item C3 not sold separately)

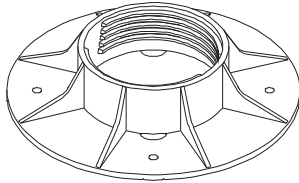

LC Base

Thread engagement indicators warn of overextension. DO NOT extend beyond indicators except to add or remove a coupler. Works with LC Top or C1, C3, and C4 Couplers.


LC Base (Bottom view)

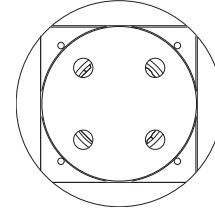

The LC Base is scored to allow easier trimming to fit the pedestal into tight spots.

When cutting the LC Base, round off any sharp edges to protect the roofing membrane.

The Bison Level.It (L-Series) Adjustable Pedestal line has a broad footprint that provides stability, is impervious to freeze thaw cycles, and offers a range of heights suited to a wide variety of applications. Precise spacer tabs allow for deck drainage and uniform paver spacing, while the screw-to-adjust height settings assure a perfectly level deck. Place spacer tab on top of pedestal. To remove tabs, strike spacer tabs with hammer on edge. The Bison Level.It Pedestal series reaches heights from 2" to 12" (51 to 305 mm) and has a weight bearing capacity of 750 lbs (FoS:3). For elevations over 12" (305 mm) see our Versadjust Pedestal line. Accessories are available to compensate for slope (up to 1" per foot or 8%) and accommodate low height applications from 1/8" to 2" (3.2 to 51 mm). Proudly manufactured in the U.S.A.

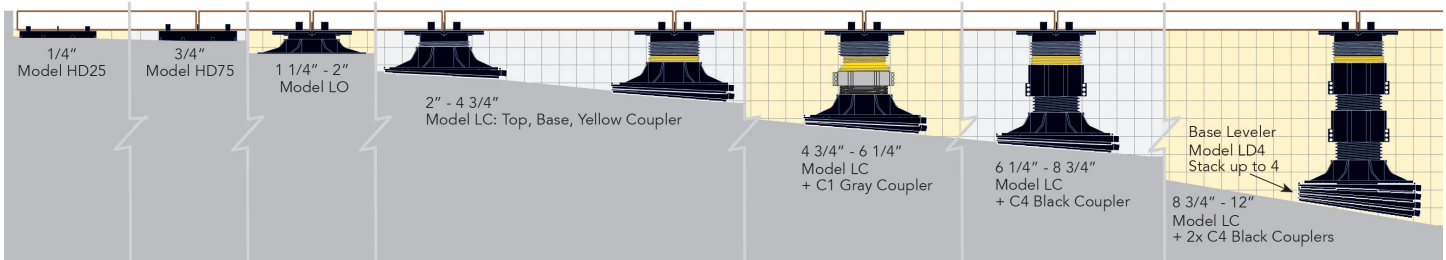


Maintenance Guide

Routine maintenance of your paver deck system will enhance the beauty, reduce major repairs, and prolong the life of your deck. Below is a list of maintenance guidelines that should be performed on a regular basis:

1. Check for pavers that rock. If you notice pavers rocking back and forth while walking on the deck, simply lift the paver up and shim one or more corners until the paver is level on all four corners. To ensure pedestal stability, make sure to not exceed the thread engagement indicators. Bison 1/16" (1.5 mm) B11 Shims or 1/8" (3.2 mm) PS1 Shims can be ordered and shipped.
2. Depending on substrate materials, some settling and/or deflection can occur. Remove the paver and adjust the pedestal until a level height is achieved. You may need to do this to more than one pedestal to level out an area.
3. Clean drains and scuppers on a regular basis. Water should completely drain off the roof deck within 48 hours after rainfall, under ambient drying conditions. Standing or pooling water can be detrimental to some waterproofing systems.
4. Periodically check the spacer tabs between pavers, and replace broken spacer tabs immediately. Loss of spacer tabs could create unsafe deck movement.
5. Make sure the edge restraint remains intact. There should not be room around the perimeter of the deck in excess of 3/16" (4.5 mm) width which would allow for lateral movement of the pavers and create an unsafe condition.
6. Follow paver manufacturers' suggestions for upkeep and maintenance of the pavers.


Advanced Layout and Pedestal Placement

Acronym	Definition
LP	Low Point
HP	High Point
RD	Roof Drain

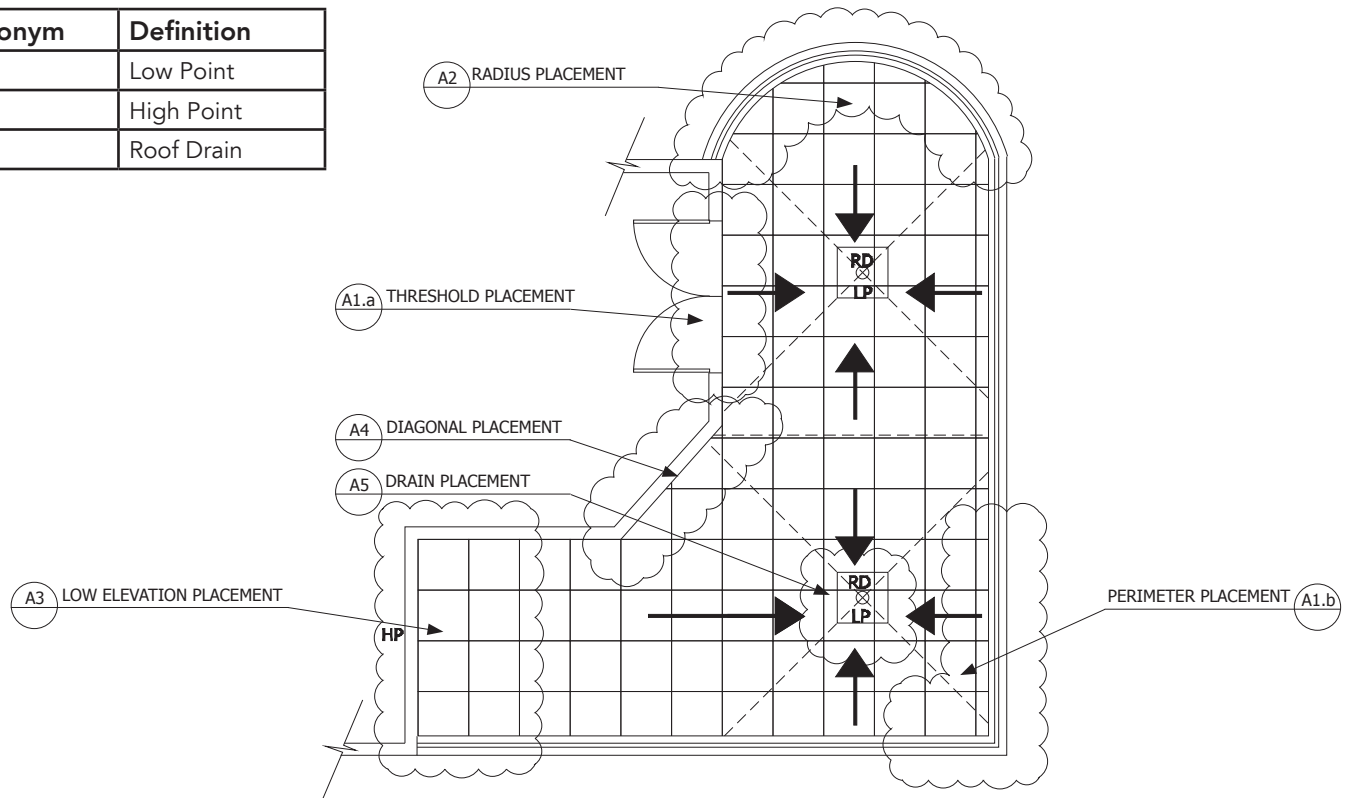


"T" Method Installation

1. Determine cavity heights at all thresholds, drains, and high points.
2. Deduct thickness of decking material.
3. Mark top of pedestal elevation around deck with chalk line or laser level.
4. Plan paver/pedestal layout pattern in advance.
5. Install "T" shaped portion of deck starting from threshold or high point.
6. Adjust to correct height and level.
7. Install on both sides of the "T".

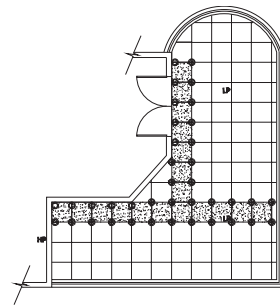


Determining Cavity Height

- The cavity height is the space between the top of the roofing membrane and the bottom of the decking material.
- Use a laser level or chalk line to assist.
- Refer to the detachable measuring device printed on the box.

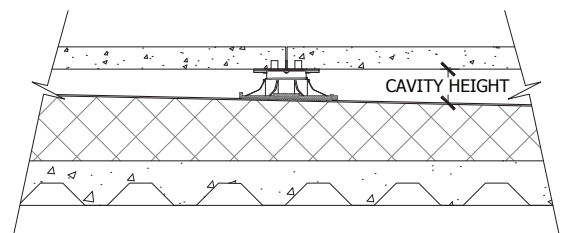


A1 (a) Threshold and (b) Perimeter Placement

- Use extra pedestals under small cut pieces for additional support.
- Adhere small pavers to top of pedestal with construction adhesive.
- Remove tabs as necessary for perimeter pedestals.
- Turn pedestals upside down or trim pedestal bases as necessary to fit around the perimeter.
- Decking pavers must not be spaced more than 3/16" (4.5 mm) from the perimeter containment.
- Adhere tabs into place with construction adhesive to maintain spacing between pavers when normal tab placement is not possible.

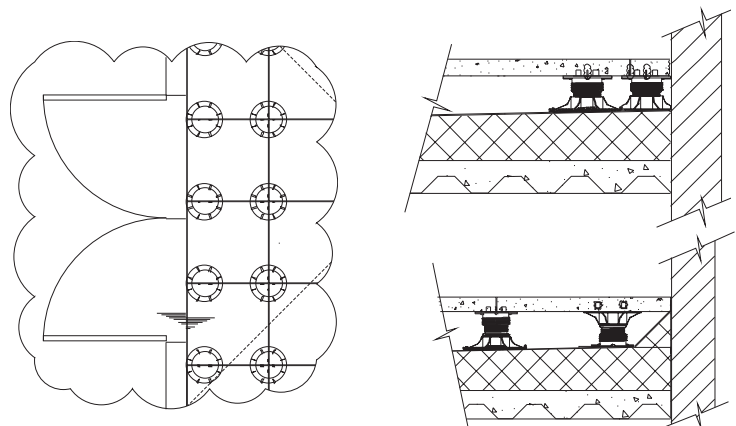

A2 Radius Placement

- Use extra pedestals under small cut pieces for additional support.
- Adhere small pavers to top of pedestal with construction adhesive.
- Remove tabs as necessary for perimeter pedestals.
- Turn pedestals upside down or trim pedestal bases as necessary to fit around the perimeter.
- Decking pavers must not be spaced more than 3/16" (4.5 mm) from the perimeter containment.
- Adhere tabs into place with construction adhesive to maintain spacing between pavers when normal tab placement is not possible.

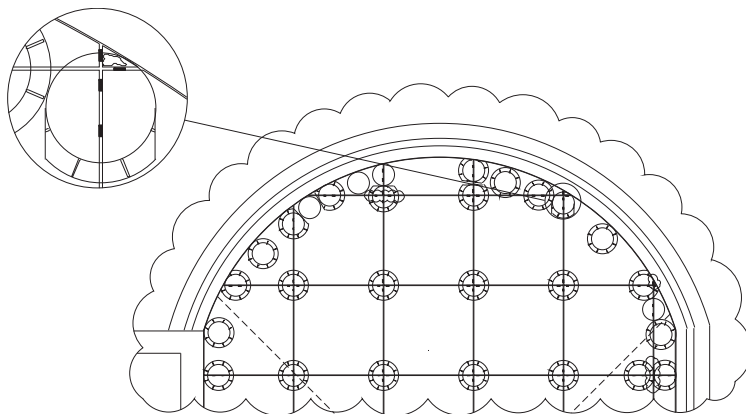


A3 Low Elevation Placement

For low cavity heights the following pedestals are available:

LOW HEIGHT PEDESTALS	
MODEL:	HEIGHT:
VT18 or VT316	● 1/8" (3.2 mm)
HD25-18 or HD25-316	○ 1/4" (6 mm)
HD50-18 or HD50-316	● 1/2" (13 mm)
HD75-18 or HD75-316	⊗ 3/4" (19 mm)
LO-18 or LO-316	⊗ 1-1/4" to 2" (32 to 51 mm)


Shims can also be used to accommodate variations in height:

- 1/16" (1.5 mm) B11 Shim
- 1/8" (3.2 mm) PS1 Shim

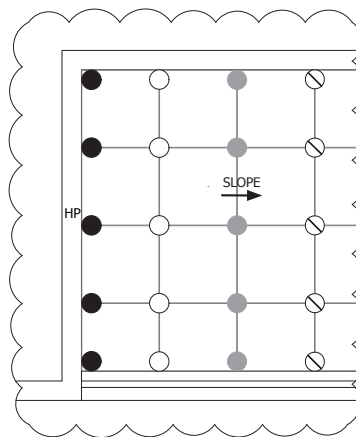



A4 Diagonal Placement

- Use extra pedestals under small cut pieces for additional support.
- Adhere small pavers to top of pedestal with construction adhesive.
- Remove tabs as necessary for perimeter pedestals.
- Turn pedestals upside down or trim pedestal bases as necessary to fit around the perimeter.
- Decking pavers must not be spaced more than 3/16" (4.5 mm) from the perimeter containment.
- Adhere tabs into place with construction adhesive to maintain spacing between pavers when normal tab placement is not possible.

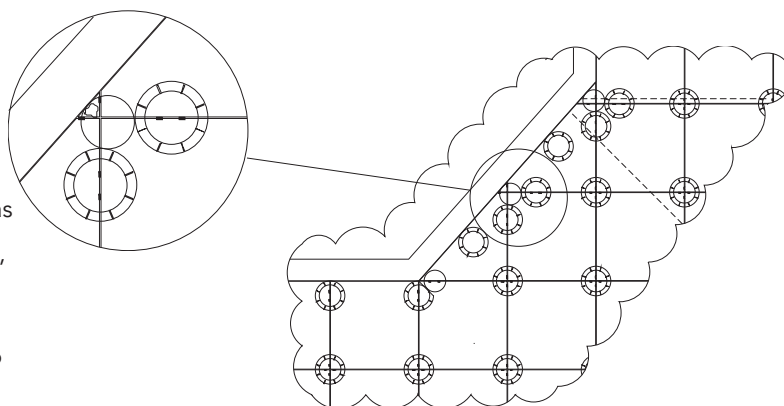

A5 Drain Placement

- Elevate a steel plate or spare paver above the drain but below the deck itself.
- Use that elevated paver to support a pedestal where you need for the deck above.

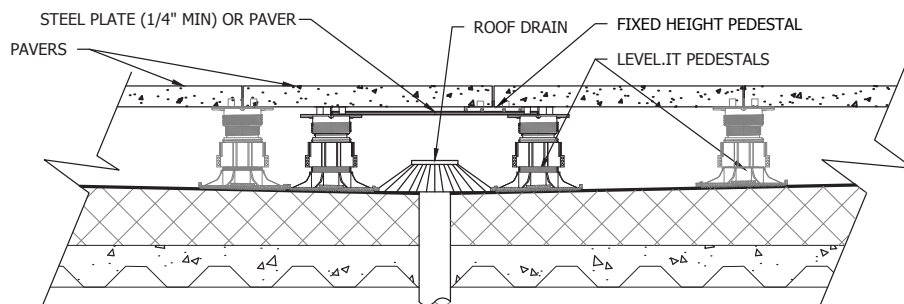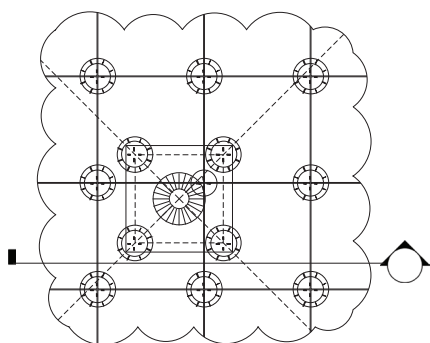


SECTION VIEW

Working with Wood

JT Wood Joist Top

Center Joist Top over Bison Pedestal. Using a screwdriver, insert screw (provided) into the hole in the center of the Joist Top and hand tighten to attach to the pedestal. Works with both 2x and 4x lumber. Attach joist(s) to Joist Top using #8 deck screws (NOT provided).

IMPORTANT: Do not overtighten screw when attaching the JT to the pedestal.

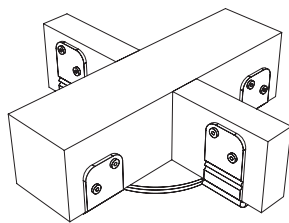


AS SHOWN: JOIST TOP WITH 2x4 AND 4x4 JOISTS

FS-1 Wood Tile Fastening Kit

Place FS-1 washer in the kerf between the surface planks and the runners. Screw FS-1 washer through center hole of spacer tab set and into pedestal.


Make sure that washer clamps all corners of wood tiles and then tighten. To remove a wood tile: Loosen screw, and, using a screwdriver, rotate FS-1 washer to release wood tile.

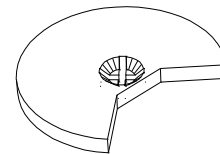

Slope Compensation

LD4 Base Leveler

- Use LD4(s) to compensate for slope in order to keep pedestals plumb (vertical) and finished deck elevation level.
- Each LD4 compensates for a 1/4" per foot slope (2%) and adds 1/4" (6 mm) to the overall height of the pedestal. Stack up to 4 total LD4s below the base of a pedestal and rotate to compensate for slopes from 0" to a maximum of 1" per foot slope (0 to 8%).
- Place LD4 on substrate with smooth side down. Center pedestal or additional LD4s between tabs on top.
- Finger tab points downhill for 1/4" per foot slope (2%) when using a single LD4.

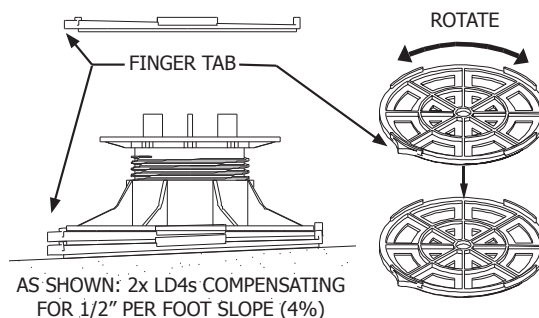


AS SHOWN: 2x LD4s COMPENSATING FOR 1/2" PER FOOT SLOPE (4%)

Working with Shims


PS1 1/8" (3.2 mm) Shims - Rigid

PS1s may be placed on top of pedestals to accommodate for minor leveling of pavers with thickness variations. Use no more than 2 shims. If using only quarter segment, adhere it to the pedestal with construction adhesive.

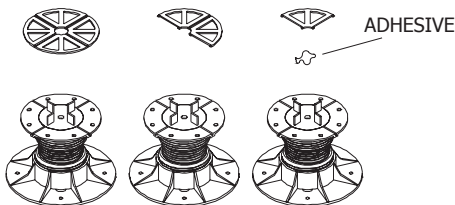


B11 1/16" (1.5 mm) Shims - Flexible

B11s may be placed on top of pedestals to accommodate for minor leveling of pavers with thickness variations. Use no more than 2 shims. If using only quarter segment, adhere it to the pedestal with construction adhesive.

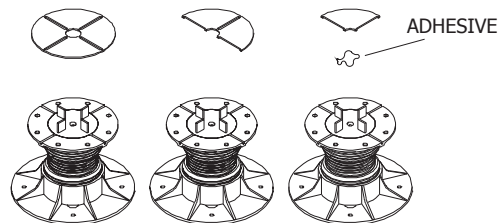

PS1 and B11 Shims Under Pedestals


Place shims (whole or in segments) under the pedestal in a stairstep fashion to compensate for sloping substrates. Use no more than 2 shims. Adhere them to each other and to the pedestal with construction adhesive. **IMPORTANT:** Do not adhere to substrate.

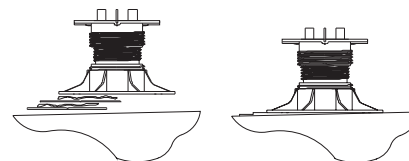

Pedestal Base Pads

Floating Insulation Base (FIB)

The FIB is required beneath Bison Pedestals to disperse the deck load over roofing systems with a compressive resistance of 20 to 40 psi (138 to 275 kPa). The FIB provides a large 12" x 12" (305 x 305mm) base bearing surface. FIBs are not recommended for use with VT or HD25 Fixed Height Pedestals. **IMPORTANT:** The pedestal must be placed in the center of the FIB for proper installation. The FIB may be trimmed to accommodate narrow perimeter placement if necessary. Trim at least 4.125" away from the center.

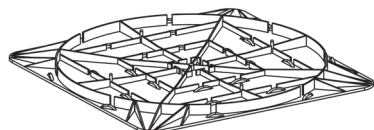

Floating Foundation Base (FFB)

FFBs are required for use beneath all Bison Pedestal decks installed on-grade (soil). Level the surface and set the FFB directly on-grade as a base below each pedestal.

